




## RS485 / USB Converter


Connect up to 12 meters, with RS-485 communication, directly to an on-site PC.

Connect the “Intelligent Converter”, able to connect up to 255 meters to an on-site PC, which may not have a 9 pin Serial Comm. port.


RS-485 / USB Converter comes with installation manual and driver software which Installs using Windows™ “Install Wizard”.

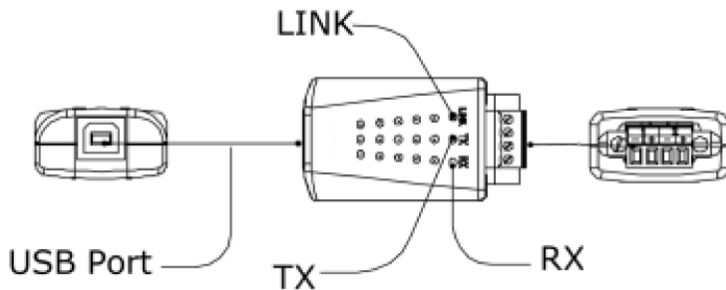

### ▪ RS-232 PIN FUNCTION

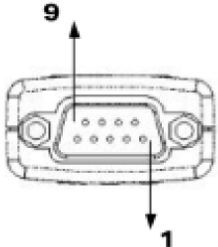	PIN No.	I/O	DESCRIPTION
	1	I	<b>Data carrier detect</b>
2	I	<b>Received data</b>	
3	O	<b>Transmitted data</b>	
4	O	<b>Data terminal ready</b>	
5	X	<b>Signal ground</b>	
6	I	<b>Data carrier</b>	
7	O	<b>Request to send</b>	
8	I	<b>Clear to send</b>	
9	I	<b>Positive dc TEST</b>	

### ▪ RS-485 PIN FUNCTION

	PIN		DESCRIPTION
	Tx	-	<b>RS-485 -</b>
+		<b>RS-485 +</b>	
Rx	-	<b>RS-485 -</b>	
	+	<b>RS-485 +</b>	